



旋转门安装指引

Revolving Door Installation Guide


门洞
Door opening

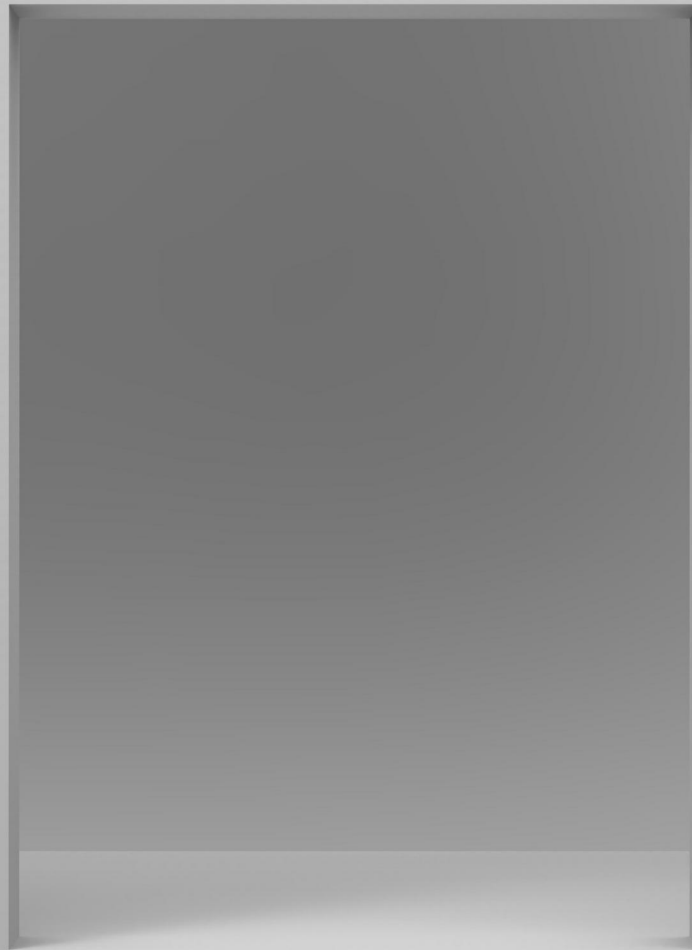

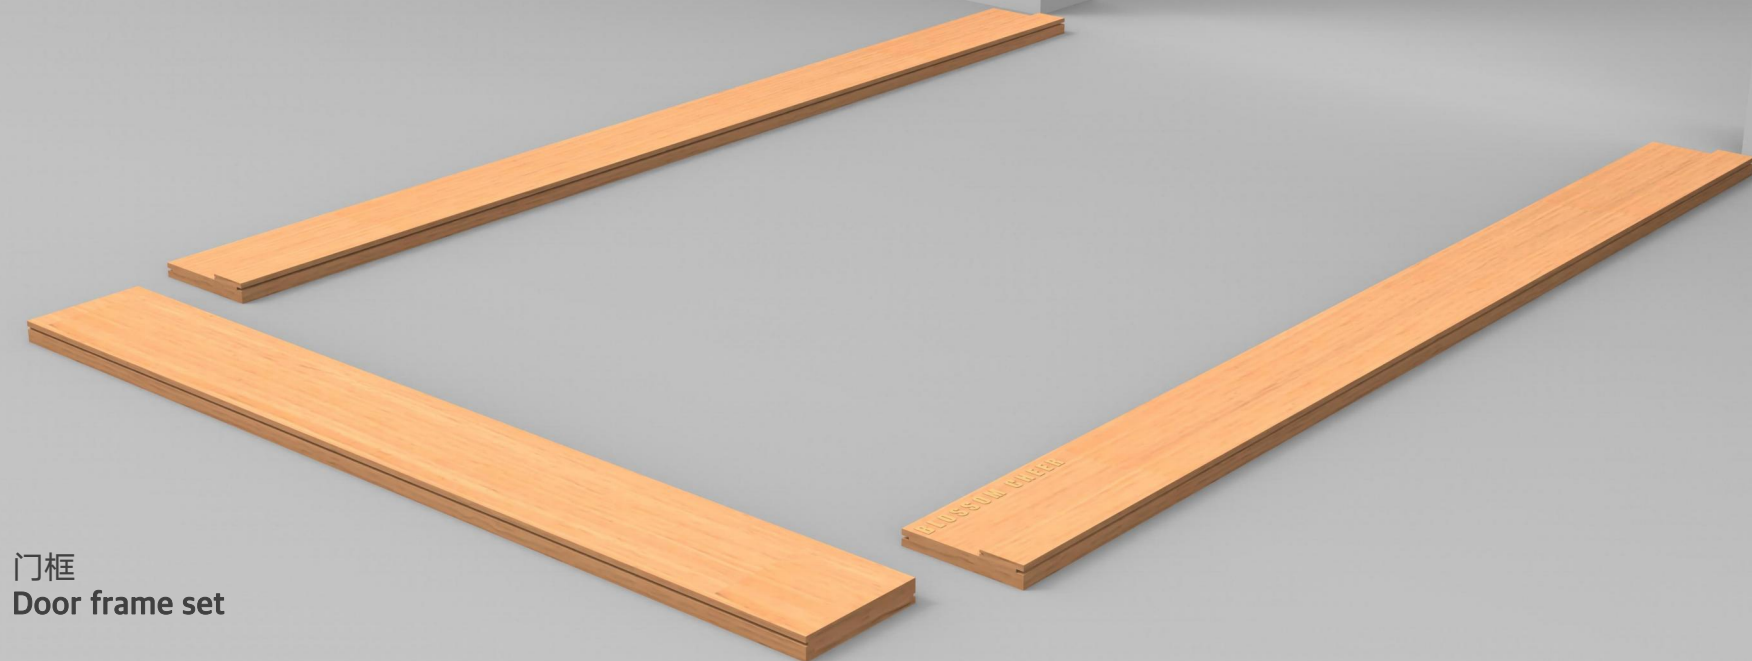


门框
Door frame set


把地弹簧零部件放到顶部门框上
Put the floor spring parts on the top door frame

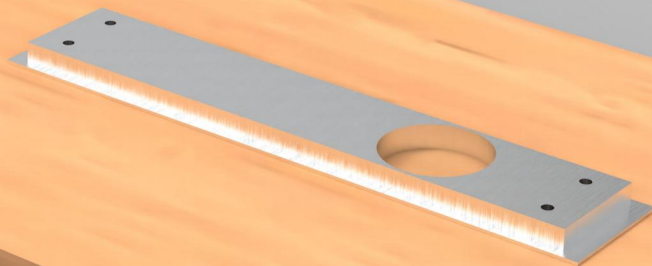


使用尺子测量地弹簧的距离
Use a ruler to measure the distance of
the ground spring hinge

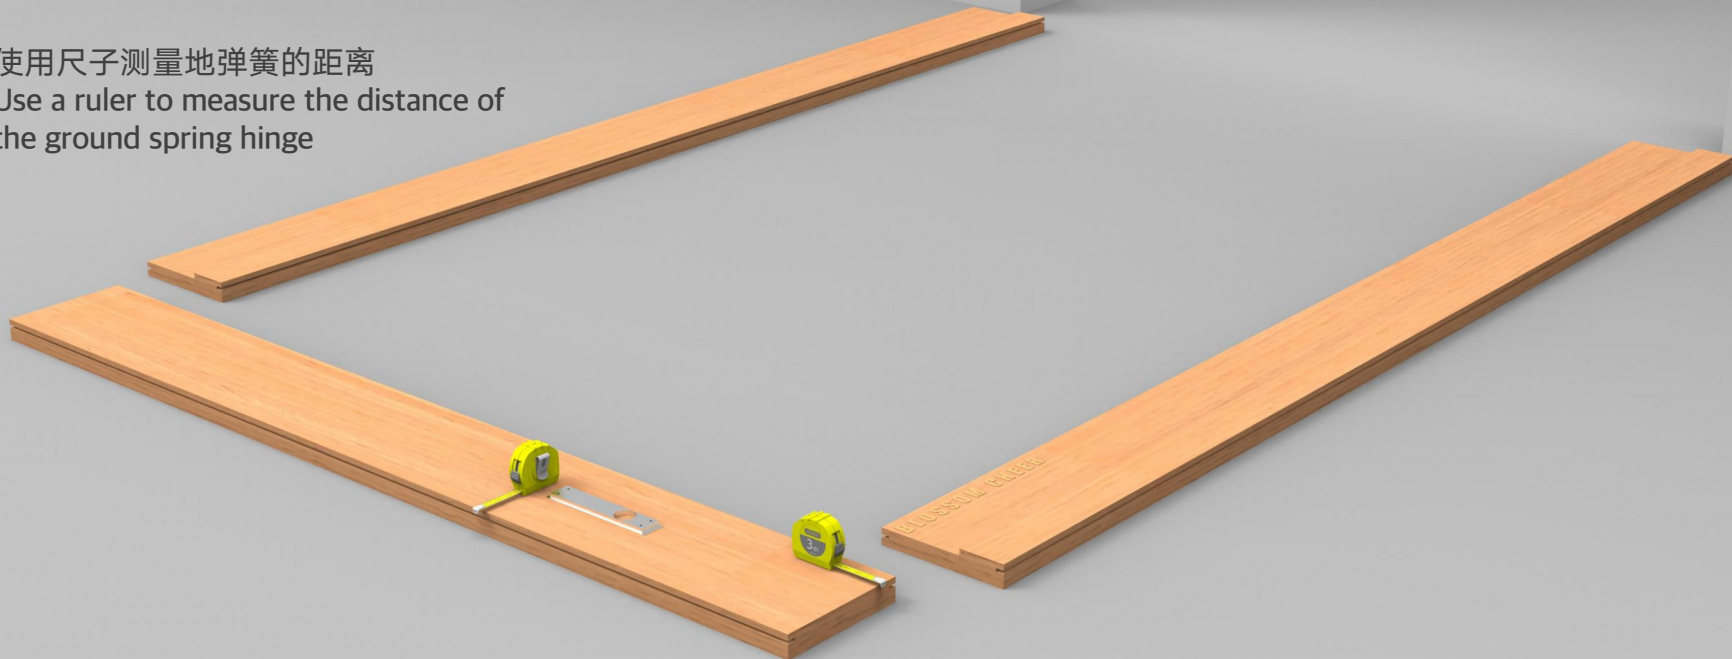

然后用铅笔或其他工具定位地弹簧位置
Then use a pencil or other tool to position the ground spring

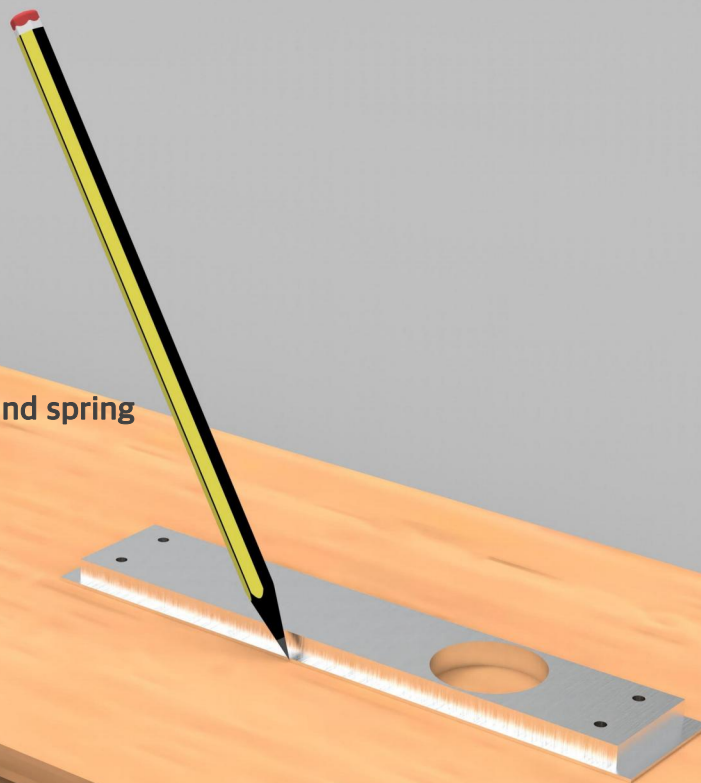

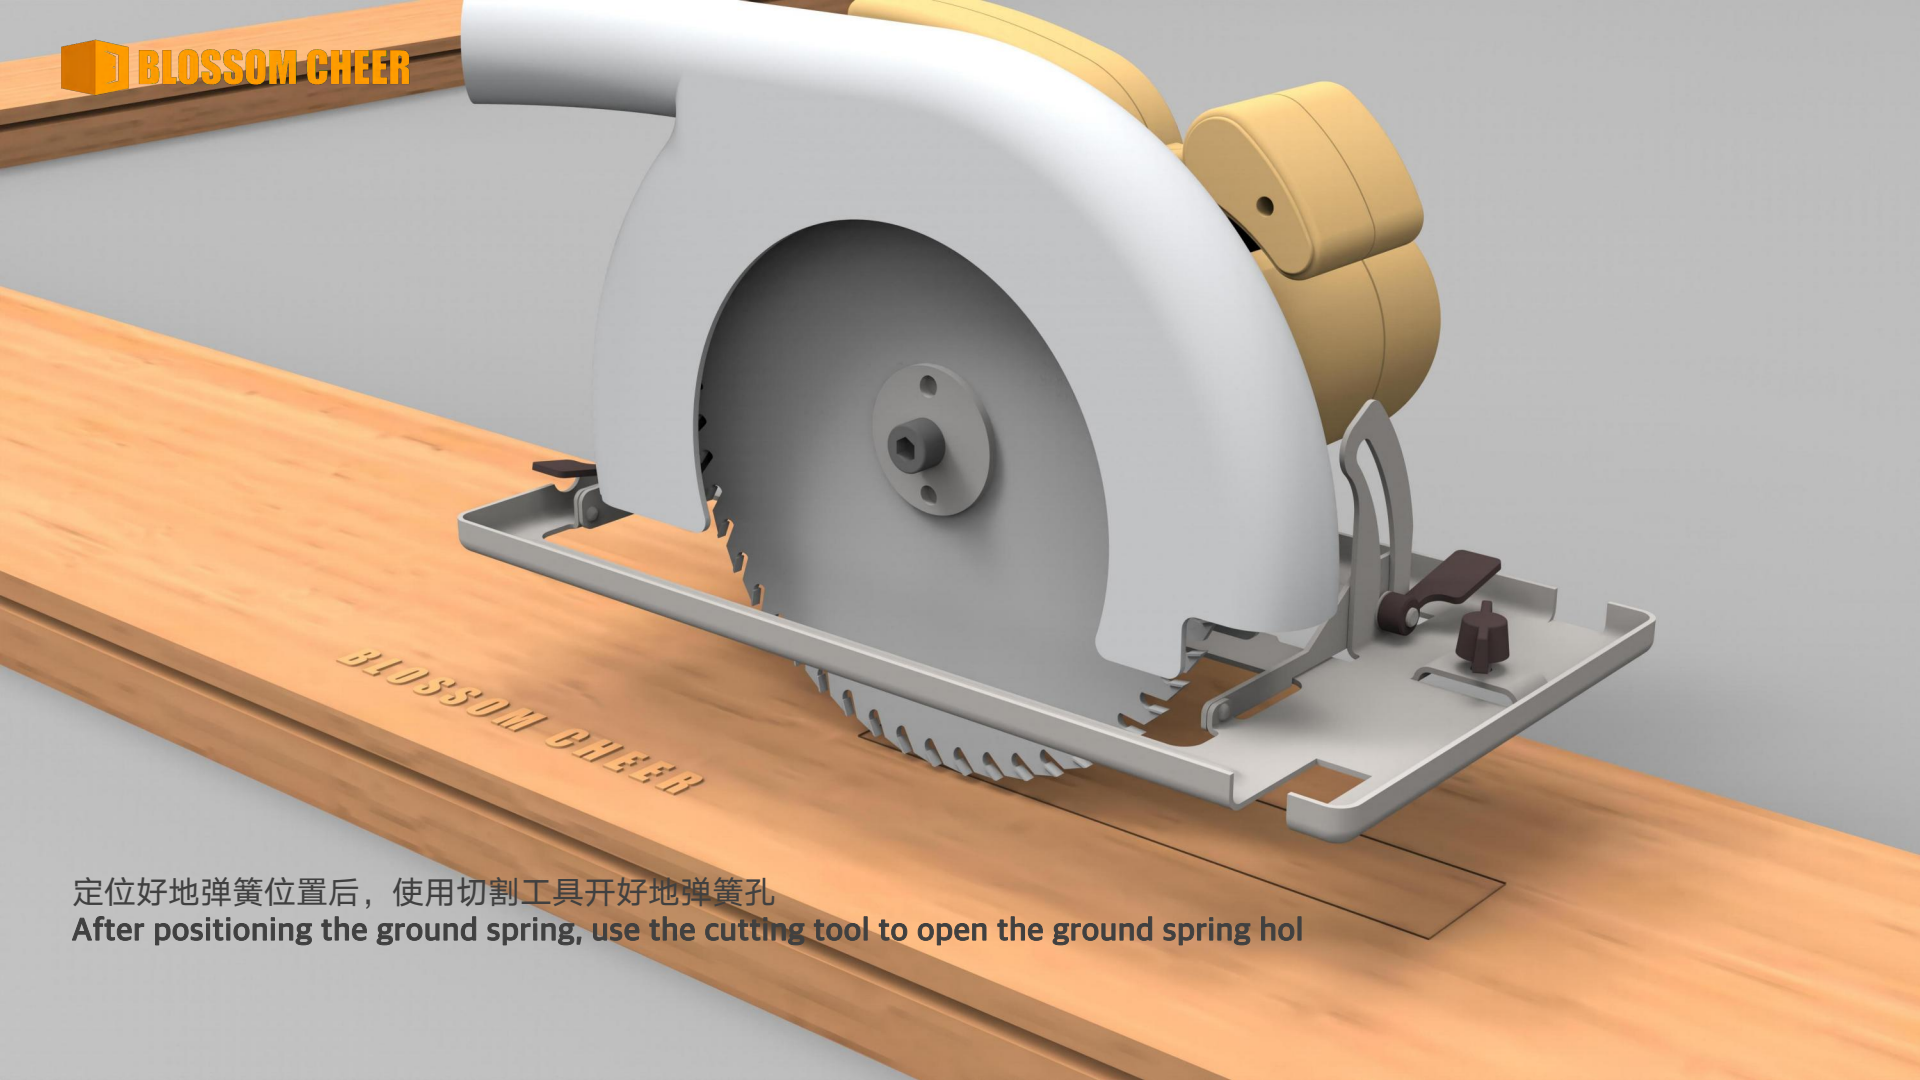


定位好地弹簧位置后，使用切割工具开好地弹簧孔

After positioning the ground spring, use the cutting tool to open the ground spring hol


把门框上的地弹簧零部件放入门框凹槽中，并拧上螺丝固定
Put the ground spring parts on the door frame into the groove of the door frame,
and screw on the screw to fix



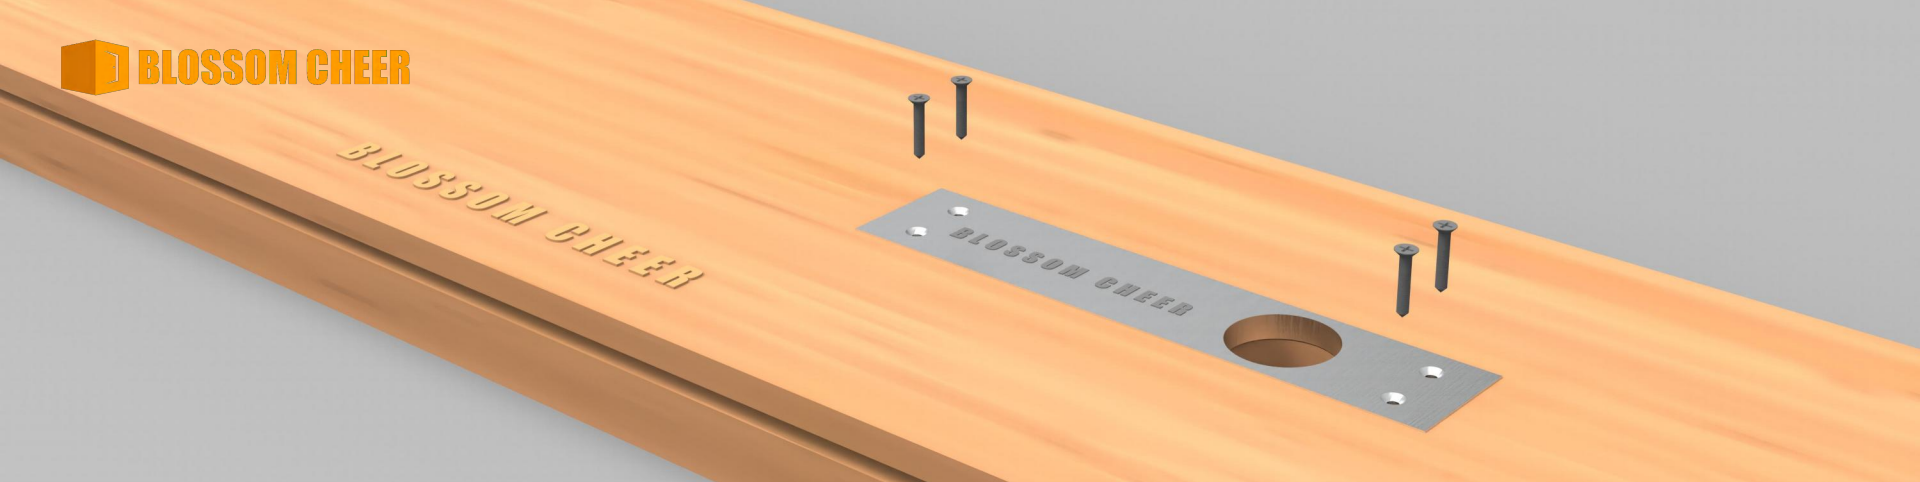

把门框上的地弹簧零部件放入门框凹槽中，并拧上螺丝固定
Put the ground spring parts on the door frame into the groove of the door frame, and screw on the screw to fix




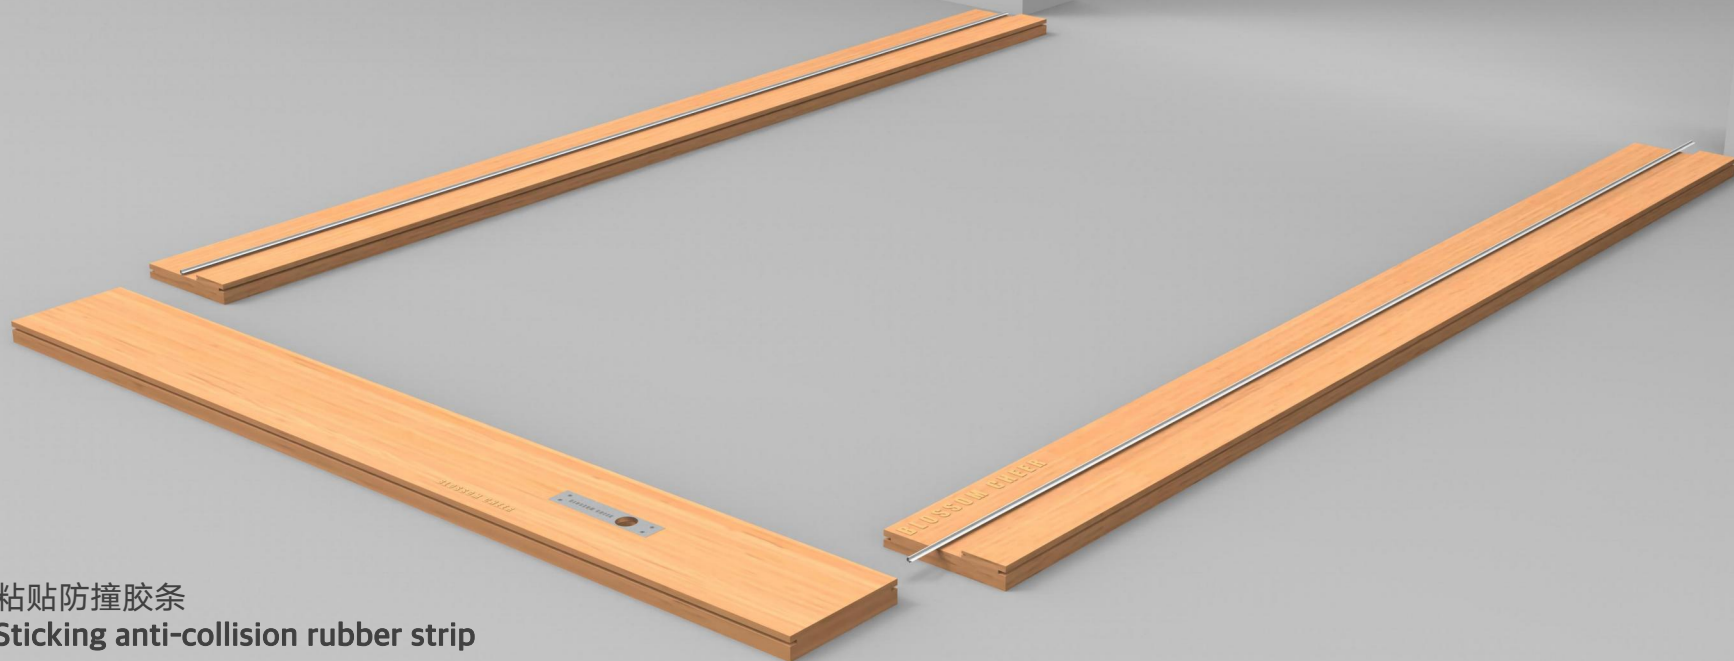



粘贴防撞胶条
Sticking anti-collision rubber strip

使用切割工具切除多余胶条

Use the cutting tool to cut off the unwanted strip

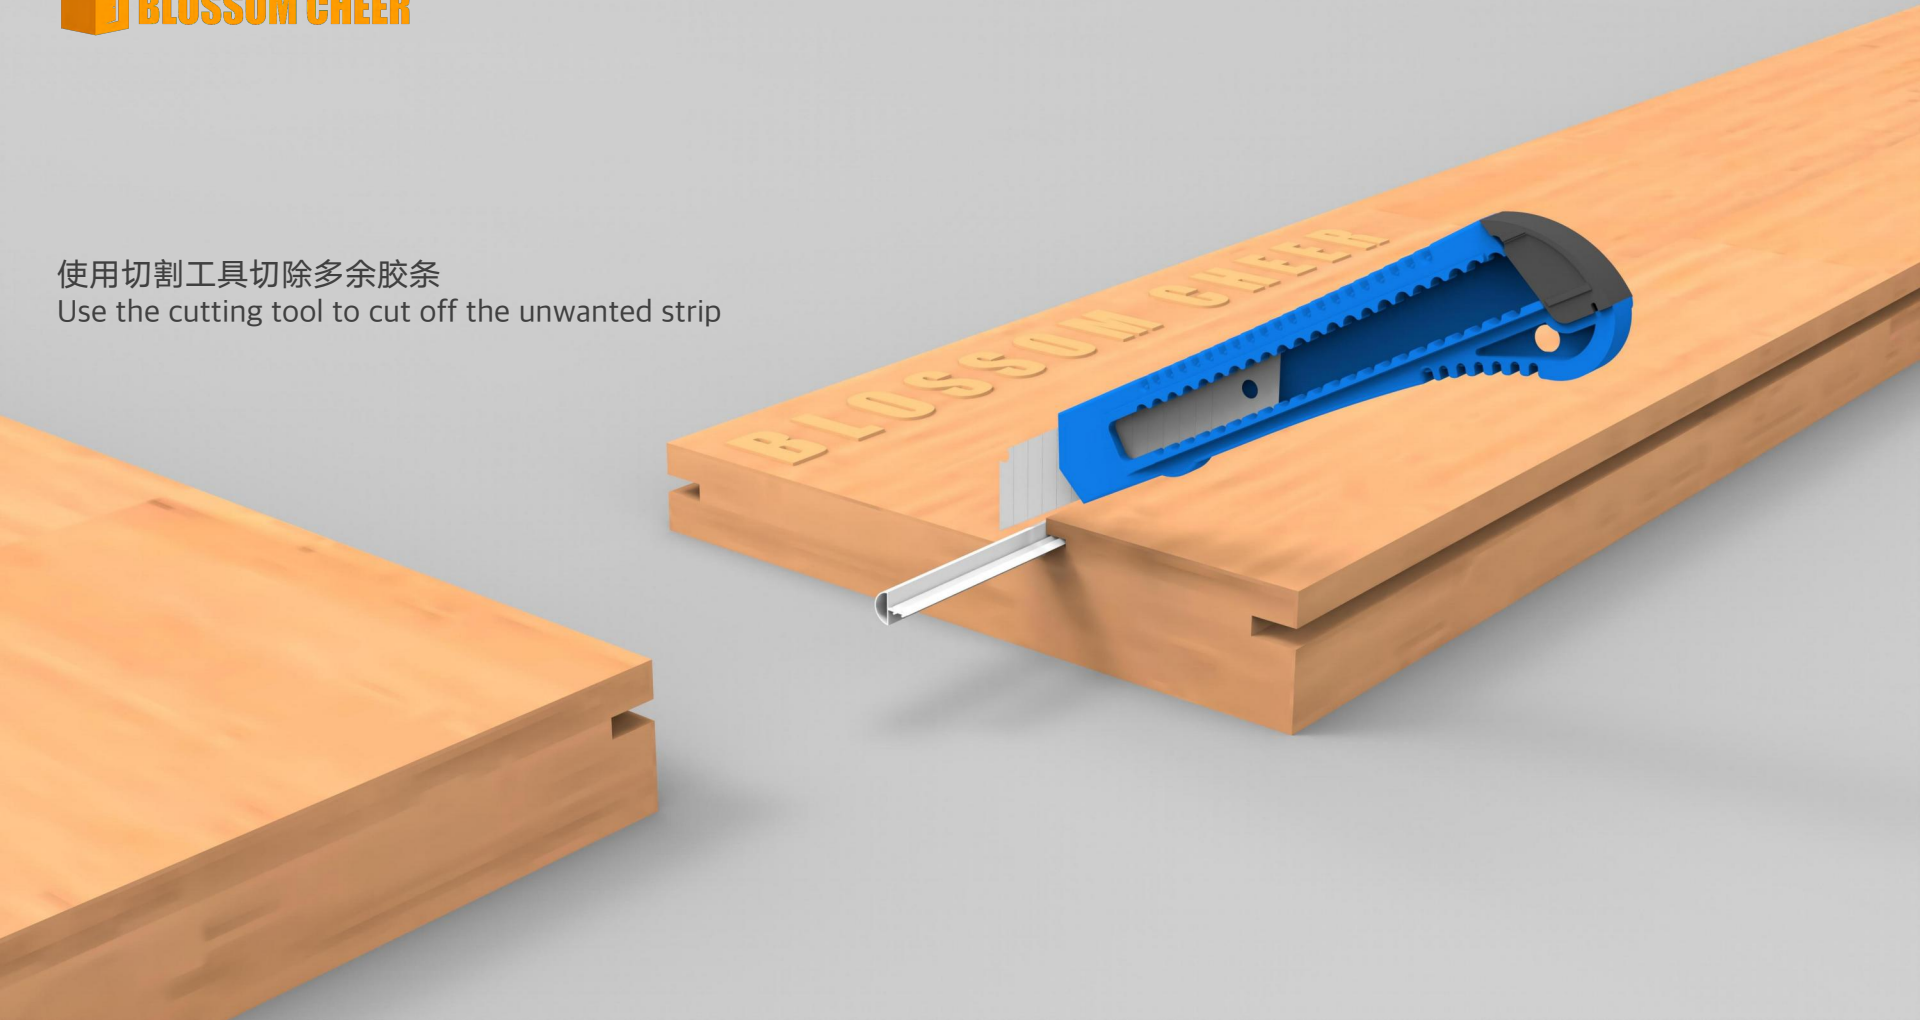

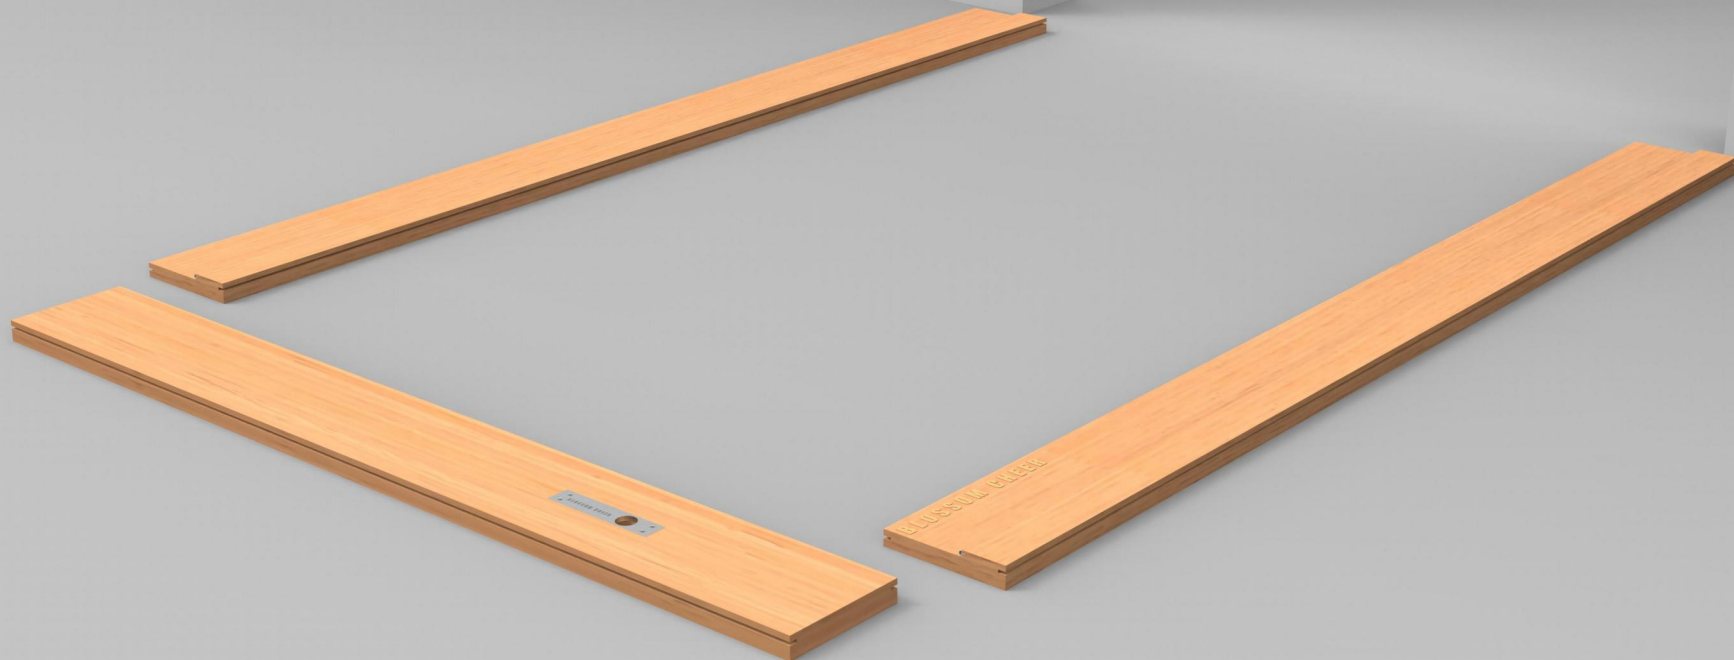


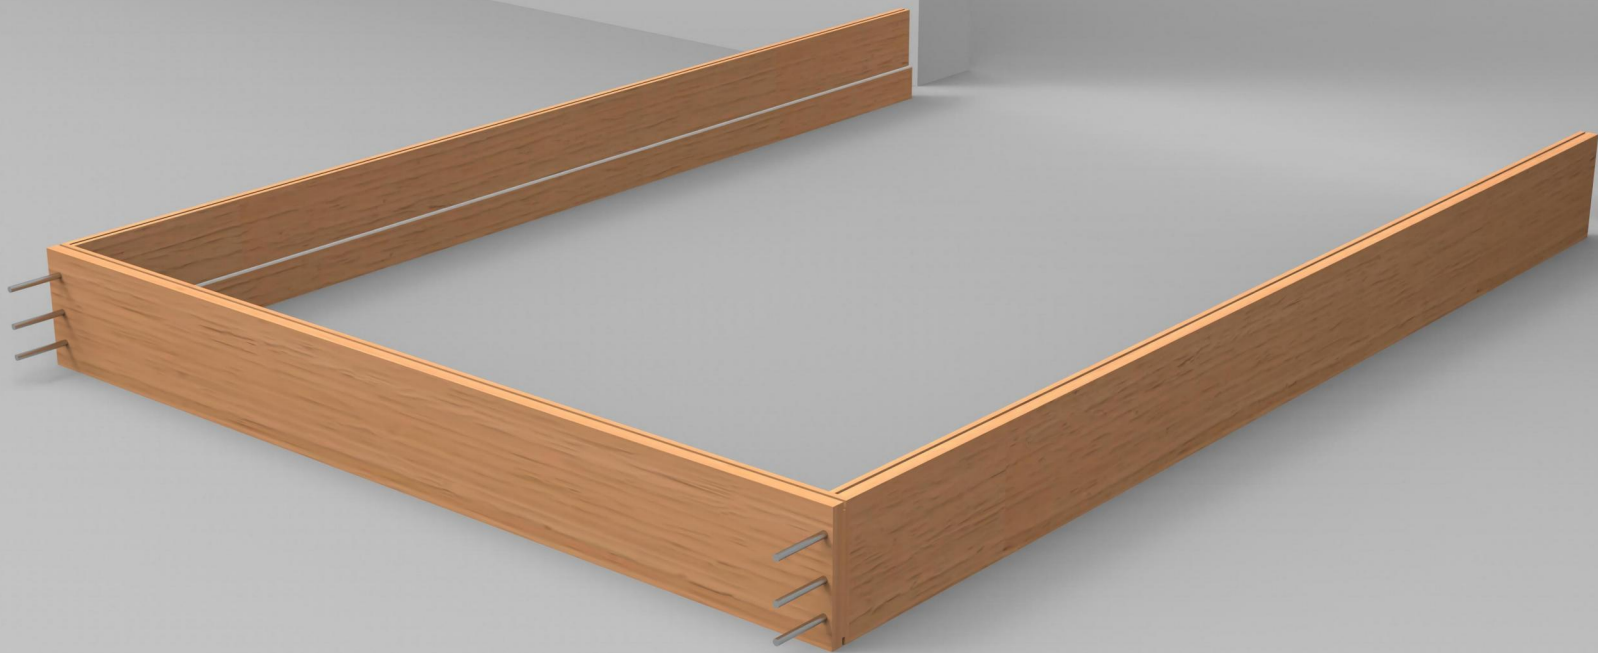

拼接门框，拼接好门框后，使用钉枪固定门框

Spliced door frame. After splicing the door frame, use the nail gun to fix the door frame

 BLOSSOM CHEER

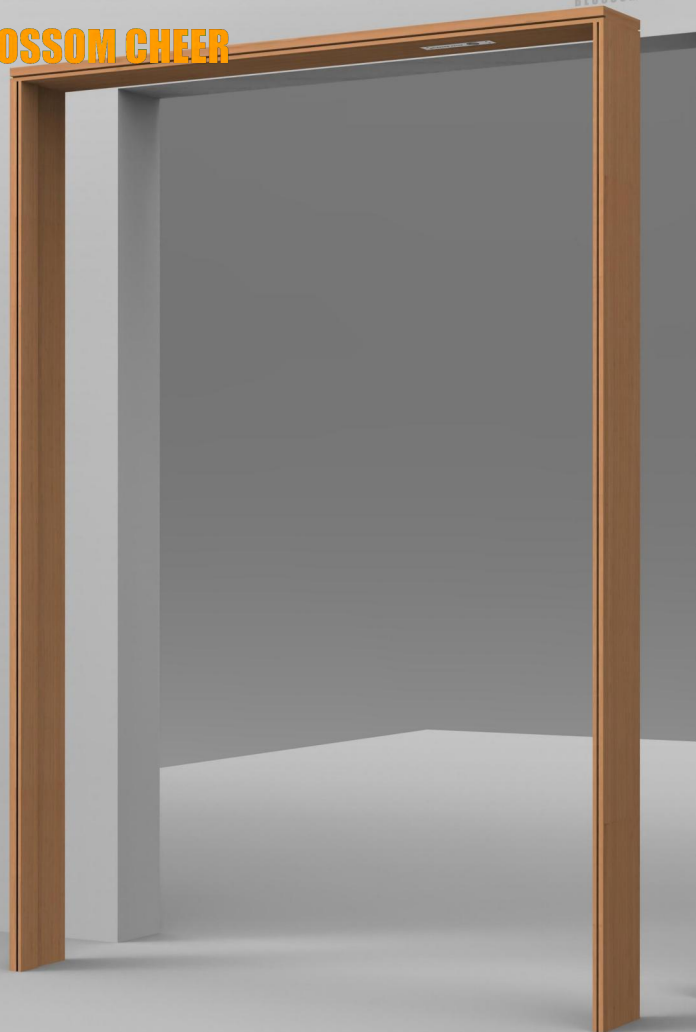

BLOSSOM CHEER



把门框立起来并推入门洞中
Stand up the door frame and push it into the door hole

在门框内部放置三根支撑杆，然后用红外线水平仪调整门框面板垂直度，用锤子调整，使两侧面板夹紧支撑杆，调整各个方向的垂直度

Three support rods are placed inside the door frame, Then use an infrared level to adjust the door frame. Panel verticality, adjusted with a hammer, The two side panels clamp the support rod, Adjust the verticality in all directions






调试好门框后，在门框上角和底角插入木头并用锤子敲紧，进行固定

After debugging the door frame, insert wood into the upper corner and bottom corner of the door frame and knock it tightly with a hammer to fix it




固定好门框后，往门框缝隙中填充发泡胶，等待发泡胶干燥

Afterfixing the door frame, fill the gap of the door framo with strofosm and wait forthe strofoam to dry

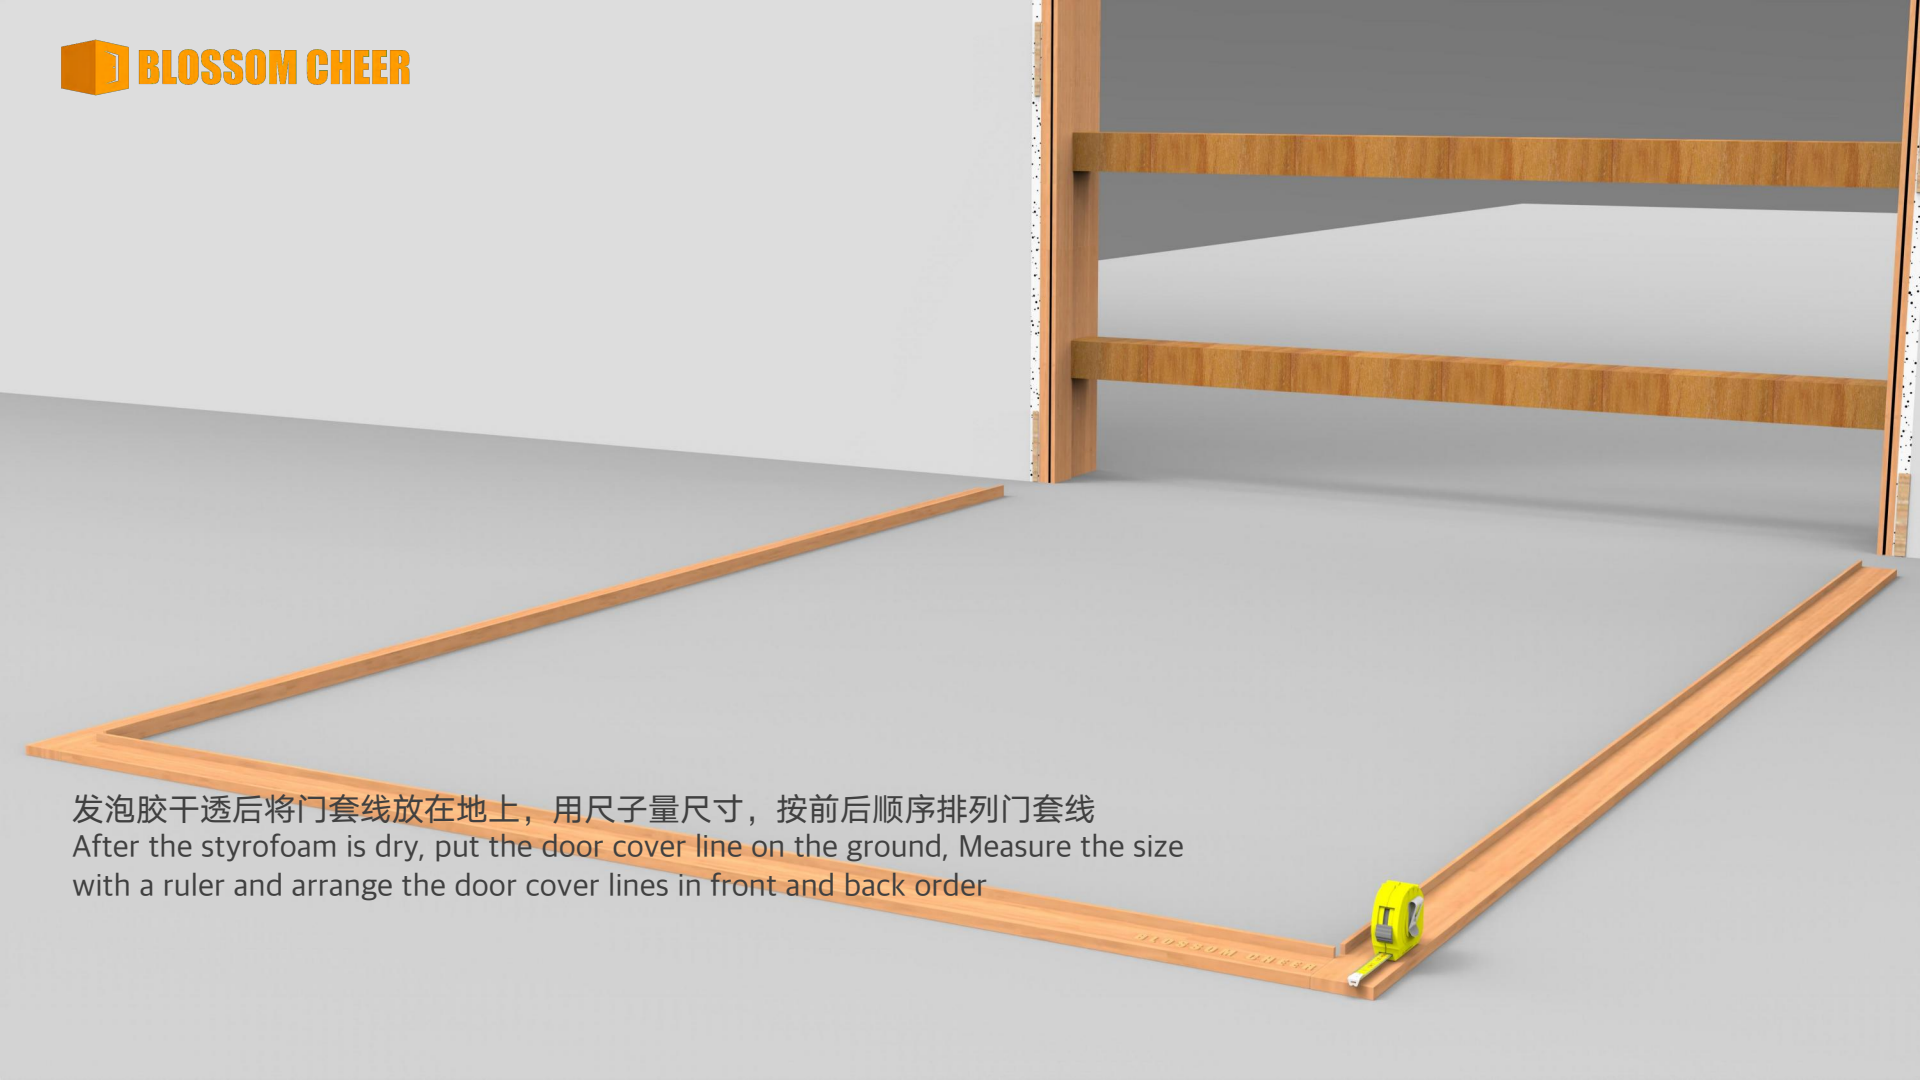


发泡胶干透后将门套线放在地上，用尺子量尺寸，按前后顺序排列门套线
After the styrofoam is dry, put the door cover line on the ground, Measure the size with a ruler and arrange the door cover lines in front and back order

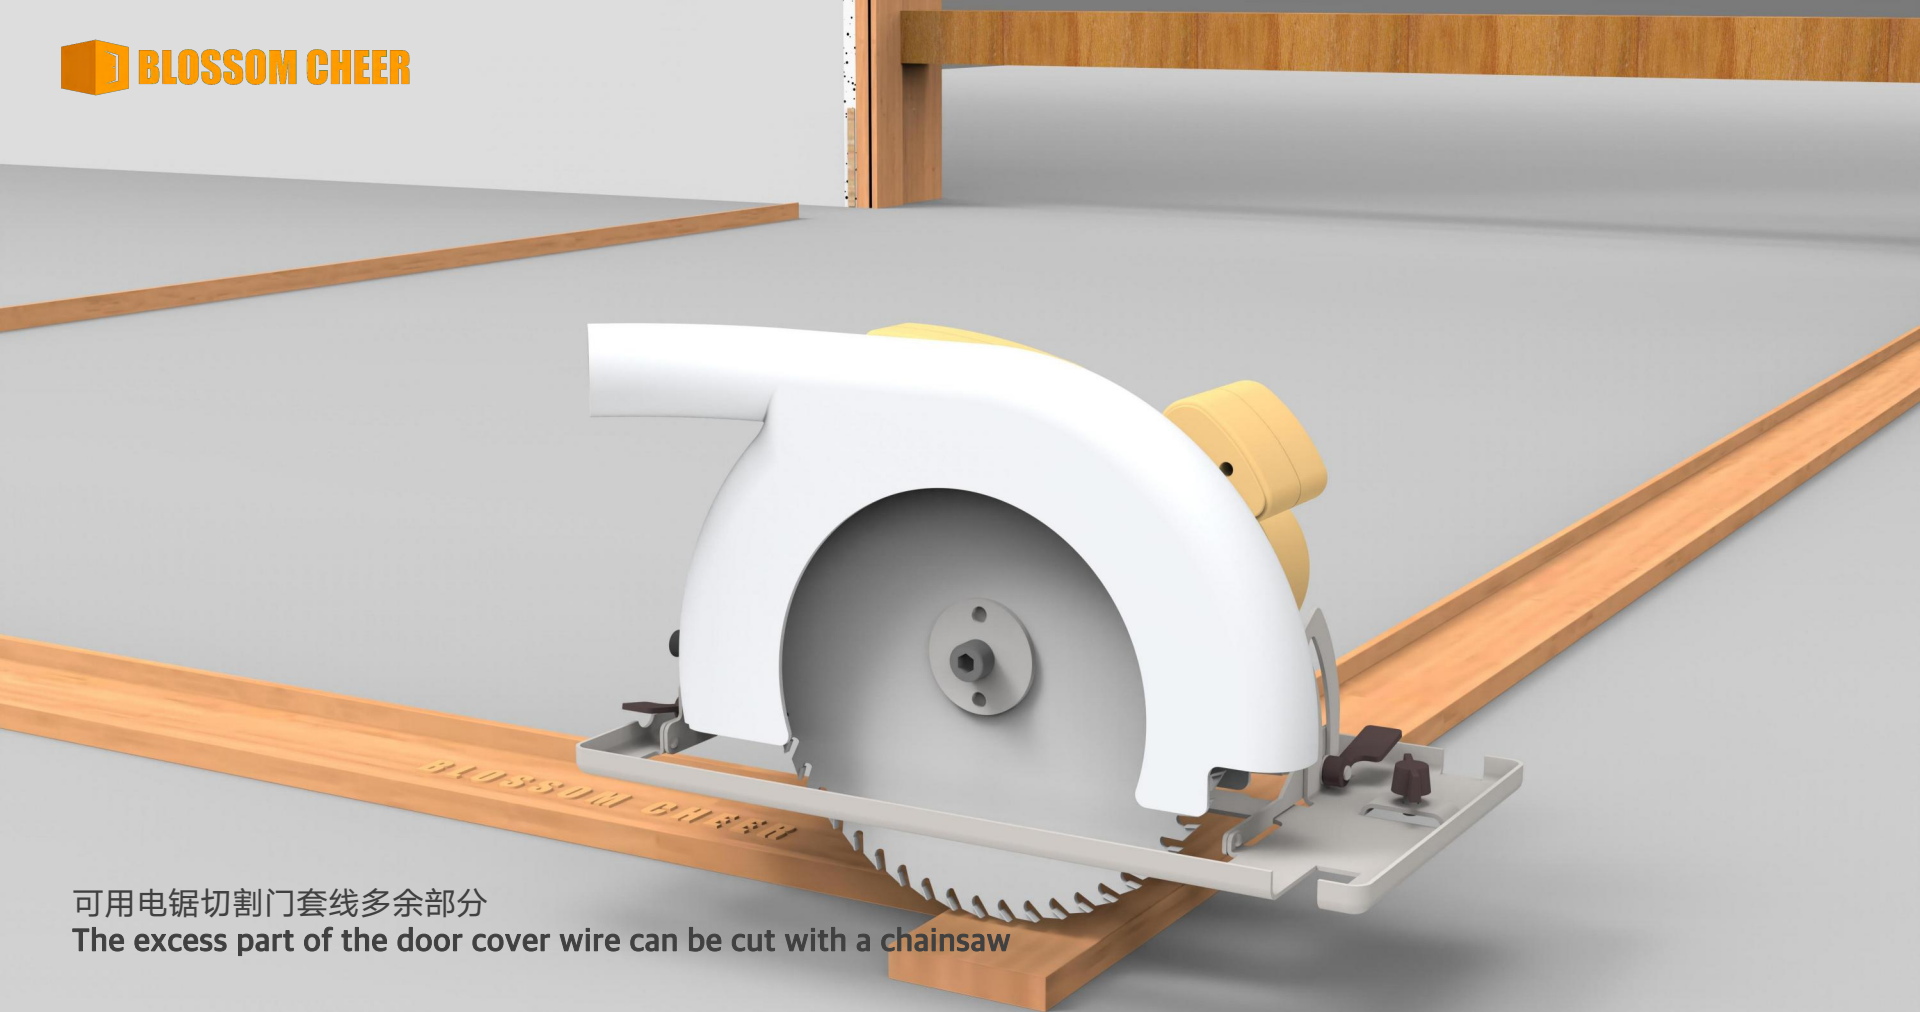


可用电锯切割门套线多余部分


The excess part of the door cover wire can be cut with a chainsaw

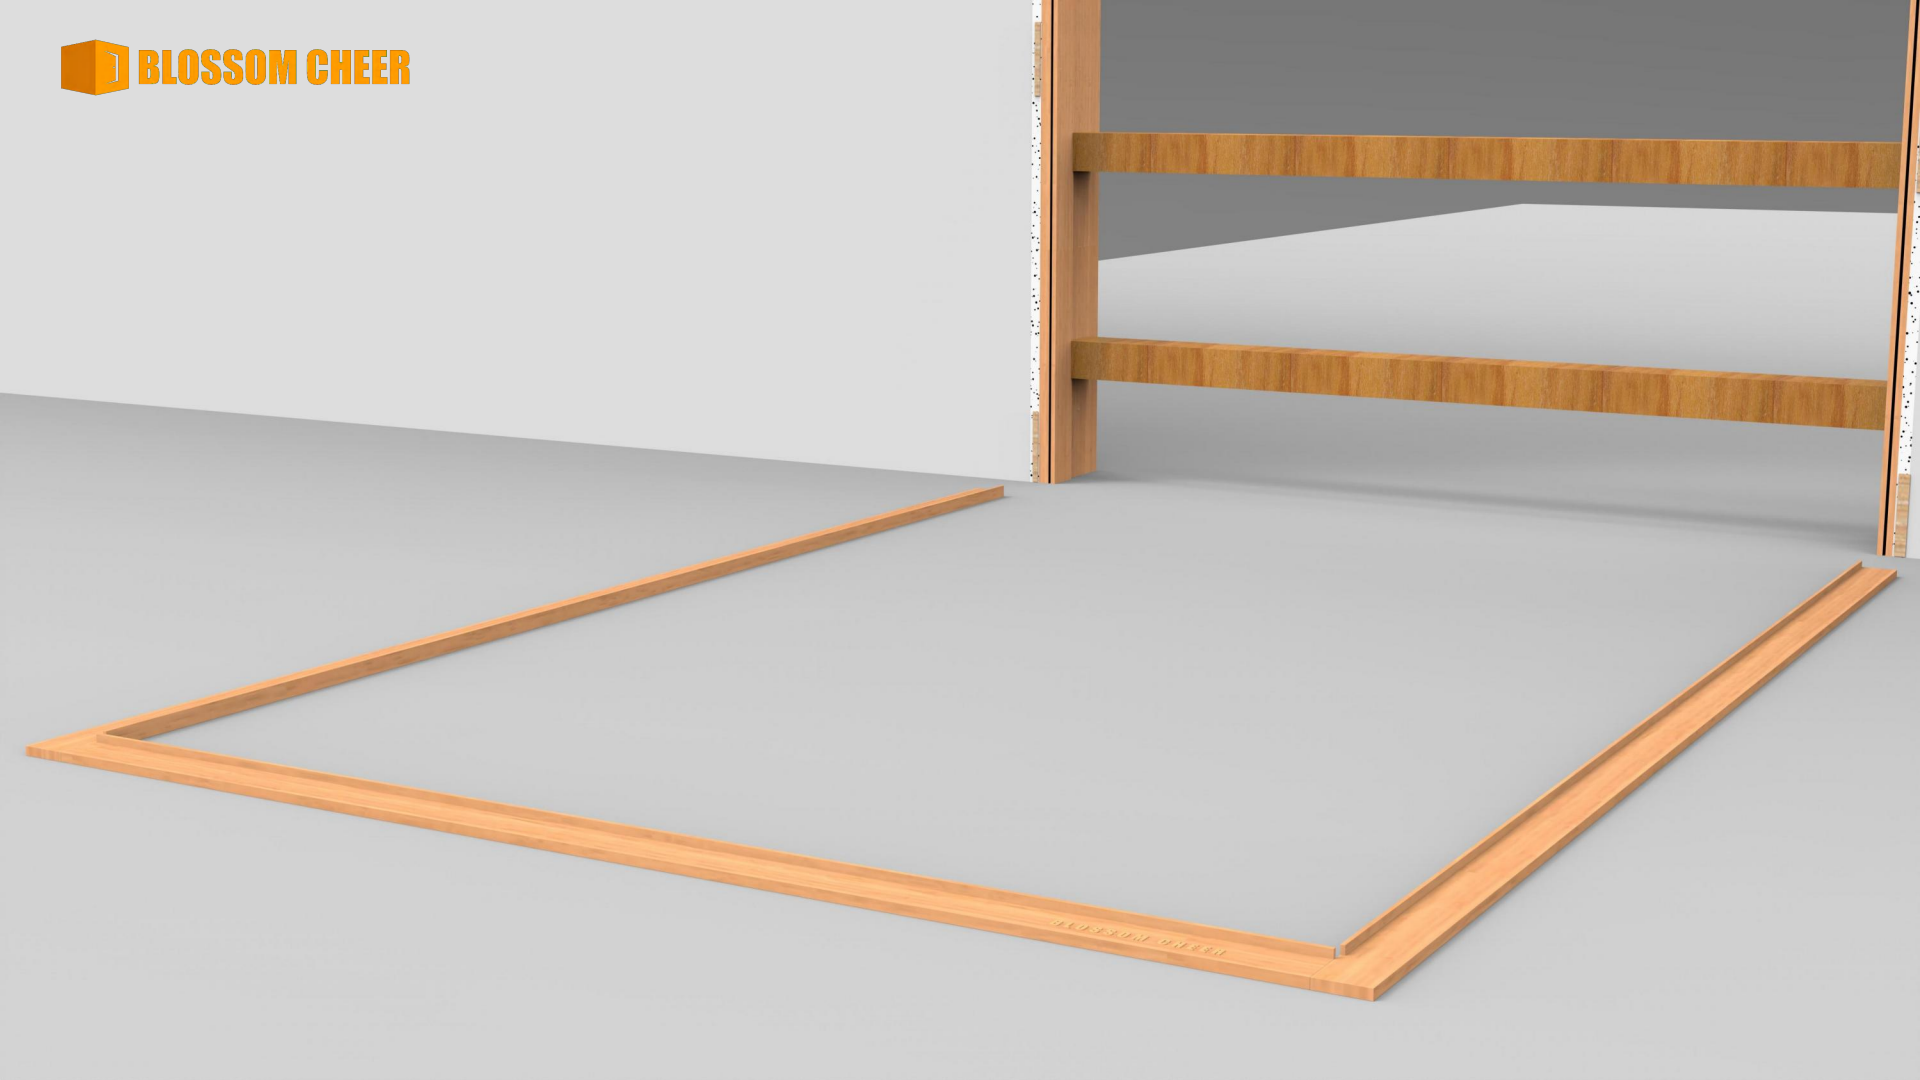

BLOSSOM CHEER

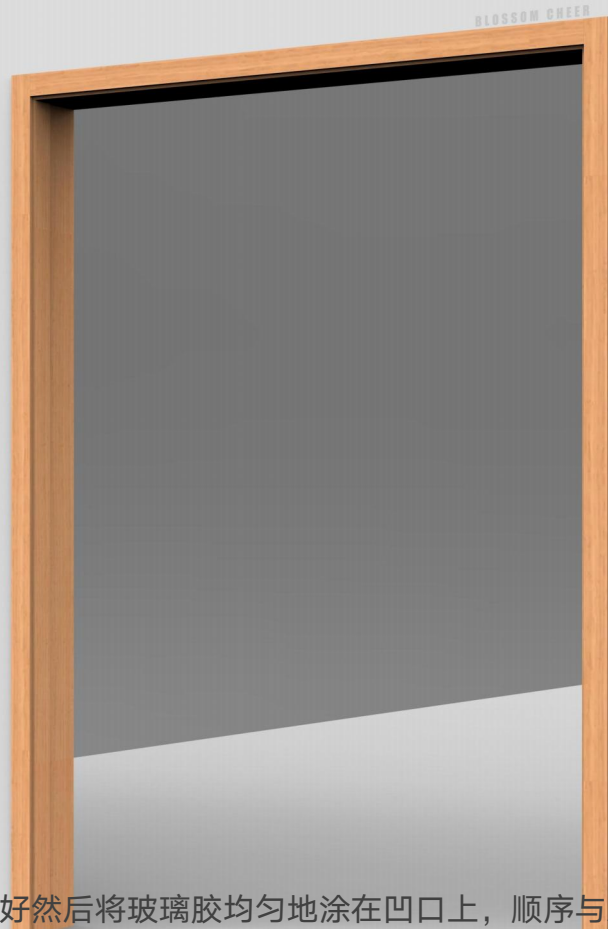

测量门套线后，切割好然后将玻璃胶均匀地涂在凹口上，顺序与发泡胶相同
After measuring the door cover line, cut it and apply the glass glue evenly on the notch, in the same order as the styrofoam glue.

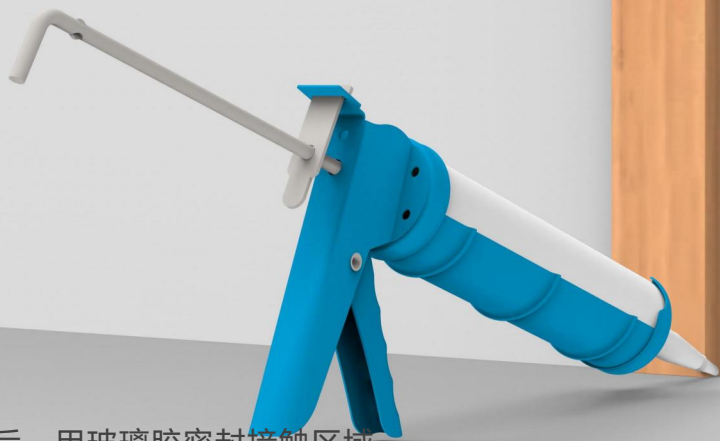



组装好门套线后，用玻璃胶密封接触区域

After assembling the door line , seal the contact area with glass glue




把地弹簧放到门洞地面上，使用尺子测量地弹簧的距离

Put the ground spring on the ground of the door opening and measure the distance of the ground spring with a ruler

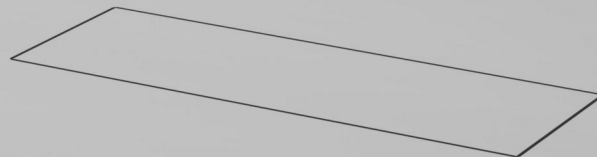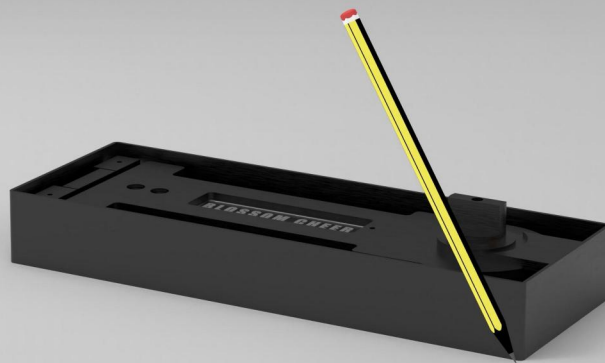

画线，使地弹簧转轴中心与门夹转轴重合

Draw a line to make the center of the floor hinge shaft coincide with the door clip shaft

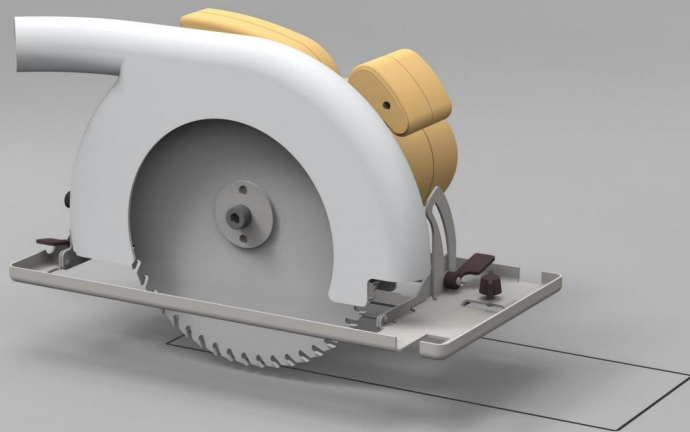

根据说明书和实物在地面开孔，孔的大小要与地弹簧壳体配紧,不能松动

Open a hole on the ground according to the instruction and the real object, and the size of the hole should be tightly matched with the shell of the floor hinge, and should not be loose




将地弹簧放入开好的孔内摆正

Put the floor hinge into the opened hole and straighten it



抬起装好门扇使地弹簧的转轴插入门扇的转轴孔内

Lift and install the door leaf so that the shaft of the floor spring is inserted into the shaft hole of the door leaf

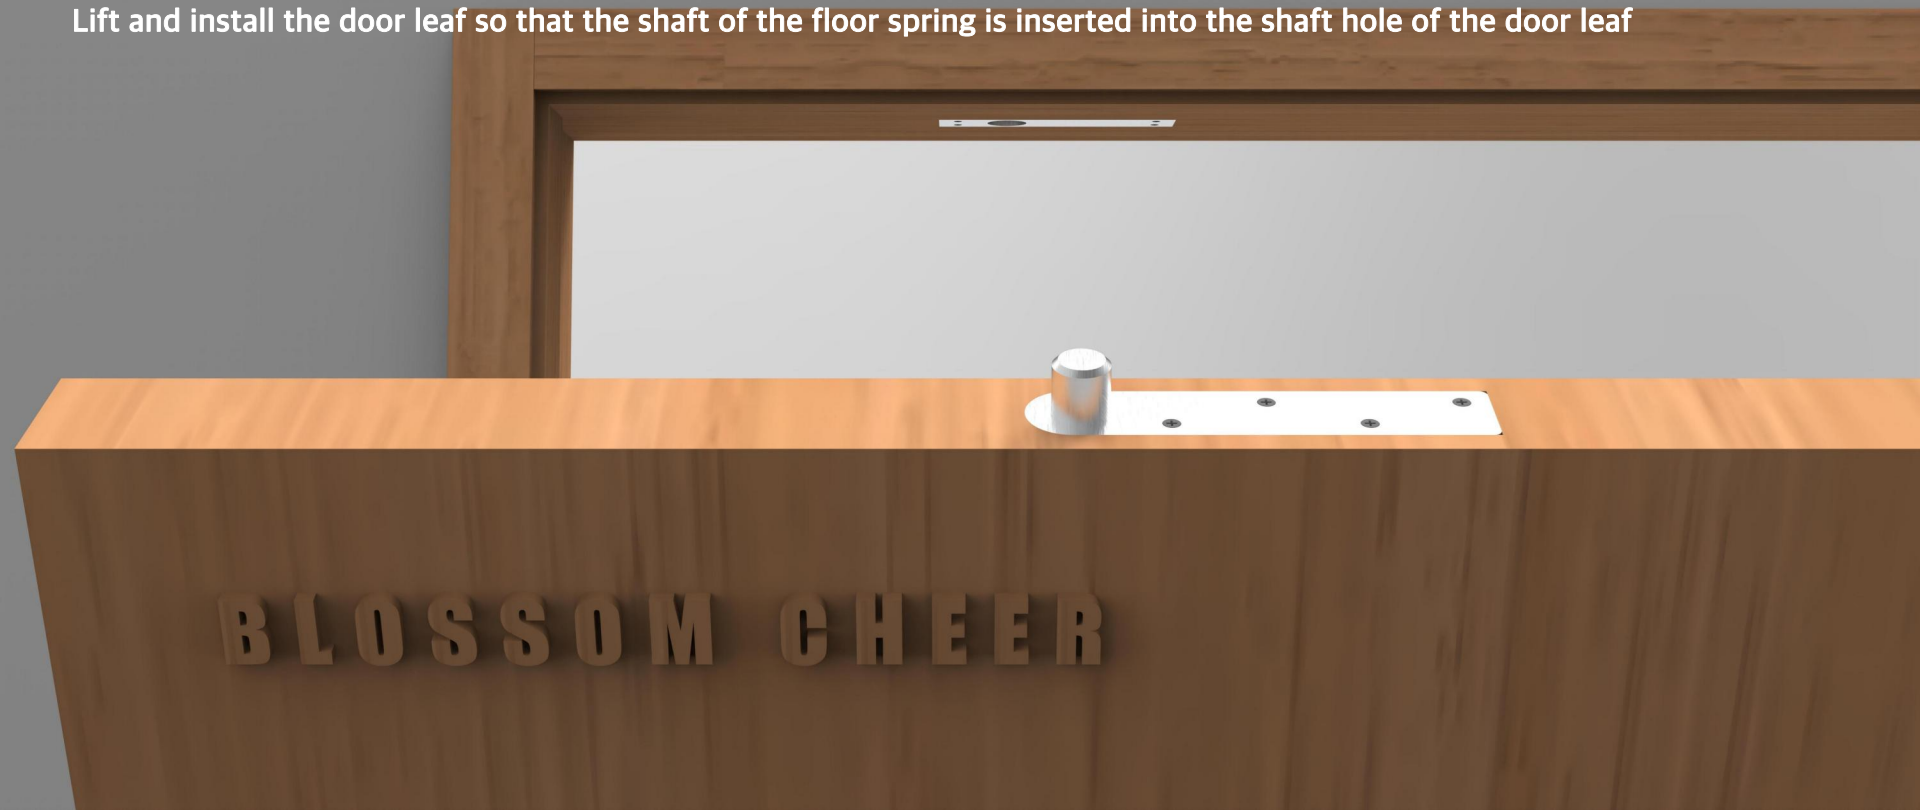



抬起装好门扇使地弹簧的转轴插入门扇的转轴孔内

Lift and install the door leaf so that the shaft of the floor spring is inserted into the shaft hole of the door leaf



调节地弹簧三个方向的螺丝，保持门扇垂直,上下转动轴心重合

Adjust the screws in the three directions of the floor hinge, keep the door leaf vertical and rotate the axis up and down to coincide

调节关门的速度
Adjust the closing speed



 **BLOSSOM CHEER**

BLOSSOM CHEER

BLOSSOM CHEER

BLOSSOM CHEER

盖上地弹簧装饰盖，并拧上螺丝，地弹簧的安装精度对其使用寿命影响很大

Cover the decorative cover of the ground Spring, and tight the screw, the installation precision of the floorhinge has a great influence on its service life.



安装完成效果
Installation completed effect